


K	LOC	ACCT	SUB	WORK ORDER NO	CITY NO	KEY NO	GRID NO	CP NO	PROJECT NO
1700	3000	2000	2000	29253	920				

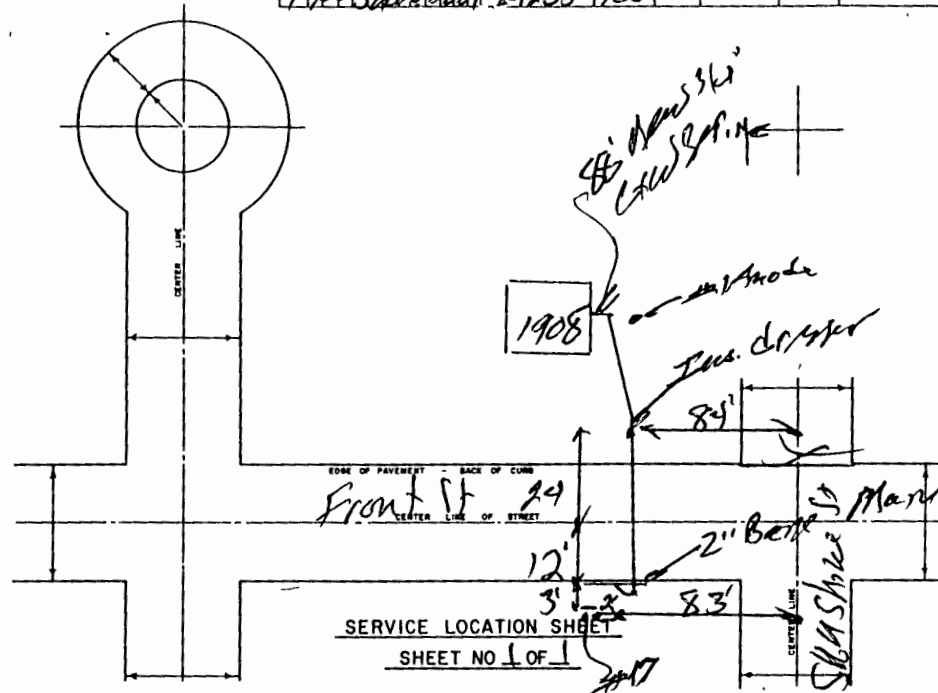

Bond Made At Dresser
Tracer wire Not Bonded
At Transitions

1908 Front St